



You have decided to buy a watch, which was assembled by a watchmaker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda Brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

**Description of the display and control buttons**

<p><b>Display elements</b></p> <p>Minute hand 1/2 second counter (hour counter after 30 minutes) Day of the week hand Hour hand Minute counter Second counter Second hand Date</p> <p><b>Control buttons</b></p> <p>Push-button A &amp; B Crown</p>	<p><b>8040.N</b></p>	<p><b>Display elements</b></p> <p>Minute hand 1/2 second counter (hour counter after 30 minutes) Date Hour hand Minute counter Second counter Second hand Date</p> <p><b>Control buttons</b></p> <p>Push-button A &amp; B Crown</p>	<p><b>8040.B</b></p>
---	----------------------	---	----------------------

01

**Setting the time**

- 1 Pull out the crown to position III (the watch stops).
- 2 Turn the crown until you reach the correct time 8:45.
- 3 Push the crown back into position I.

**Please note:**  
\* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «00». Once the hour and minute hands have been set, 3 must be pushed back into position I at the exact second.

02

**Setting the date (quick mode)**

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown anticlockwise until the correct date 01 appears.
- 3 Push the crown back into position I.

**Please note:**  
During the date changing phase between approx. 8 PM and 12 PM, the date must be set to the date of the following day.  
An extreme acceleration in setting the date with quick mode can induce a false date indication. The synchronization is re-established by setting the date from 01 till 31 (crown in position II).

03

**Setting the date, day of the week (8040.N), time**

Example:  
- Date / time on the watch: 17 / 01:25 / MON  
- Present date / time: 23 / 20:35 / SAT

- 1 Pull out the crown to position III (the watch stops).
- 2 Turn the crown until yesterday's day of the week FR appears.
- 3 Push the crown to position II.
- 4 Turn the crown anticlockwise until yesterday's date appears 22.
- 5 Pull out the crown to position III (the watch stops).
- 6 Turn the crown until the correct date 23 and day of the week SAT appears.
- 7 \*\* Continue to turn the crown until the correct time 8:35 PM appears.
- 8 Push the crown back into position I.

**Please note:**  
\* To set your watch to the exact second, please refer to the chapter entitled «Setting the time».  
\*\* Please observe the AM/PM clock rhythm.

04

**Chronograph: Basic function**  
(Start / Stop / Reset)

Example:  
1 Start: Press push-button A.  
2 Stop: to stop the timing, press push-button A once more and read the chronograph counters:  
4 min / 38 sec / 1/2 sec  
3 Zero positioning: Press push-button B. (The chronograph hands will be reset to their zero positions.)

05

**Chronograph: Accumulated timing**

Example:  
1 Start: (start timing)  
2 Stop: (e.g. 15 min 5 sec following 1)  
3 Restart: (timing is resumed)  
4 Stop: (e.g. 5 min 12 sec following 3 = 20 min 17 sec (The accumulated measured time is shown))  
5 Reset: The chronograph hands are returned to their zero positions.

**Please note:**  
\* Following 4, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...).

06

**Chronograph: Intermediate or interval timing**

Example:  
1 Start: (start timing)  
2 Display interval: (e.g. 20 minutes 17 seconds (timing continues in the background))  
3 Making up the measured time: (the chronograph hands are quickly advanced to the ongoing measured time.)  
4 Stop: (Final time is displayed)  
5 Reset: The chronograph hands are returned to their zero position.

**Please note:**  
\* Following 4, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

07

**Adjusting the chronograph hands to zero position**

Example:  
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- 1 Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position.)
- 2 Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated.)

**Adjusting the second counter hand**  
Single step: A 1 x short  
Continuous: A long

**Adjusting the next hand B**

**Adjusting the 1/2 second counter hand (position 3h)**  
Single step: A 1 x short  
Continuous: A long

**Adjusting the next hand B**

**Adjusting the minute counter hand (position 9h)**  
Single step: A 1 x short  
Continuous: A long

- 3 Returning the crown to position I  
Termination of the chronograph hands adjustment (can be carried out at any time).

08



Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW)  
Accuracy: +20 / -10 seconds per month

