

You have decided to buy a watch, which was assembled by a watch-maker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.



SWISS  
MILITARY  
BY CHRONO

WWW.SWISSMILITARYTIME.CH

Description of the display and control buttons

Display elements

Z60

Second hand

Minute hand

Hour hand

Second counter

Day of the week hand

Minute counter

Date

Control buttons

Push-button A & B

Crown

Display elements

Z50

Second hand

Minute hand

Hour hand

Minute counter

Second counter

Date

Control buttons

Push-button A & B

Crown

01

Setting the time

1 Pull out the crown to position III (the watch stops).

2 Turn the crown until you reach the correct time 8:45.

3 Push the crown back into position I.

Please note:

\* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, 3 must be pushed back into position I at the exact second.

02

Setting the date (quick mode)

1 Pull out the crown to position II (the watch continues to run).

2 Turn the crown anticlockwise until the correct date 1 appears.

3 Push the crown back into position I.

Please note:

During the date changing phase between approx. 09:45 PM and 12 PM, the date must be set to the date of the following day.

03

Setting the date, day of the week (Z60) and time

1 Pull out the crown to position III (the watch stops).

2 Turn the crown anticlockwise until yesterday's day of the week **WED** appears.

3 Push the crown to position II.

4 Turn the crown until yesterday's date appears **22**.

5 Pull out the crown to position III (the watch stops).

6 Turn the crown anticlockwise until the correct date **23** and day of the week **THU** appears.

7 \*\* Continue to turn the crown anticlockwise until the correct time 8:35 PM appears.

8 Push the crown back into position I.

Please note:

\* To set your watch to the exact second, please refer to the chapter entitled «setting the time».

\*\* Please observe the AM/PM clock rhythm.

04

Chronograph: Basic function  
(Start / Stop / Reset)

Example:

1 Start: Press push-button A.

2 Stop: to stop the timing, press push-button A once more and read the chronograph counters: 20 min / 38 sec

3 Zero positioning: Press push-button B. (The chronograph hands will be reset to their zero positions.)

05

Chronograph: Accumulated timing

Example:

1 Start: (start timing)

2 Stop: (e.g. 15 min 5 sec following 1)

3 Restart: (timing is resumed)

4 Stop: (e.g. 5 min 12 sec following 3) = 20 min 17 sec (The accumulated measured time is shown)

5 Reset: The chronograph hands are returned to their zero positions.

Please note:

\* Following 4, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...).

06

Chronograph: Intermediate or interval timing

Example:

1 Start: (start timing)

2 Display interval: e.g. 20 minutes 17 seconds (timing continues in the background)

3 Making up the measured time: (the chronograph hands are quickly advanced to the ongoing measured time).

4 Stop: (Final time is displayed.)

5 Reset: The chronograph hands are returned to their zero position

Please note:

\* Following 4, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

07

Adjusting the chronograph hands to zero position

Example:

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

1 Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position.)

2 Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated.)

08

Adjusting the second counter hand

Single step A 1 x short

Continuous B 1 x long

Adjusting the next hand B

Single step A 1 x short

Continuous B 1 x long

Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).

CE

Battery type: 395 (diameter 9.5 mm x 2.6 mm / SR 927 SW)  
Accuracy: +20 / -10 seconds per month

03/2015

